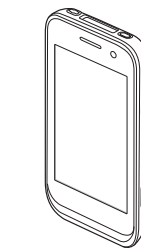# Package Contents
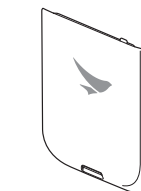

EF400 device

Battery

Battery cover

Micro USB cable

Product Overview

Front

Receiver
Charging LED
Touchscreen
Left button
Volume up button
Volume down button
Front camera
Right button
Multi-purpose jack

For Windows

Back button
Search button
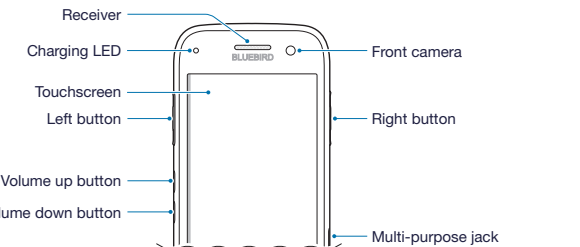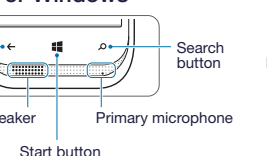Speaker
Primary microphone
Start button

For Androids

Menu button
Back button
Speaker
Primary microphone
Home button

Back

Flash
Rear camera
Secondary microphone
External device connector
Battery cover
Battery lock

Bottom and Top

Barcode scanner
Headset jack
Power button
Charging contacts
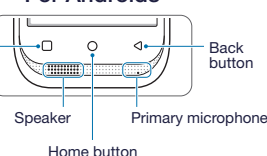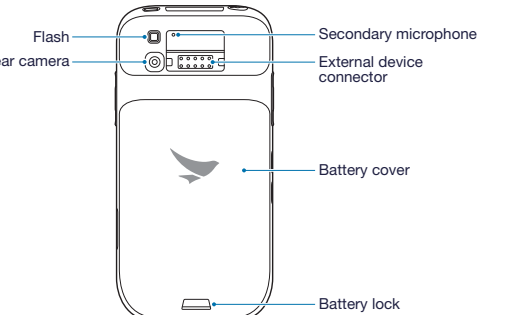
Inserting the inner components

1 Slide the battery lock and lift up the battery cover.

2 Lift up the bottom of the battery and pull it out of the compartment, if necessary.

SIM card

3 Insert a micro SIM card.

Micro SD

4 Insert a micro SD card.

Battery

5 Insert the battery. Make sure the gold contacts are aligned.

7 Close the battery lock to lock the battery cover.

6 Insert the top of the battery cover first and then press around the edges of the cover.

Charging the Battery

1 Open the cover of multi-purpose jack.

2 Plug the micro 5-pin end of the charger into the device's multi-purpose jack.

• The charging LED turns red when the battery is charging.
• The charging LED turns green when the battery is fully charged.

3 Connect the micro USB cable with power adapter and then plug the charger into a power outlet.

Turning the Device On or Off

Turning the Device On

Press and hold the Power button for a few seconds.

Turning the Device Off

1 Press and hold the Power button for a few seconds.

2 For Windows device, drag the screen downward.
For Android device, tap **Power off**.

Using the Touchscreen

Use finger gestures to use the touchscreen effectively.

Tap

Zoom in or out

Tap and hold

Swipe

Drag

Screen Overview

Depending on the operating system of your purchased EF400 device, the initial screen is different. This screen is the starting point for all apps and features.

For Windows device, tap **All apps** on the Start screen and for Android device, tap ⊞ on the Home screen.

Swipe the screen to search for an app you want to open or a feature you want to use.

Windows Start Screen

Android Home Screen

Windows Apps Screen

Android Apps Screen

BLUEBIRD CUSTOMER SERVICE

Operating Hours

Monday to Friday 9:30 A.M. - 6:30 P.M.
(GMT Time: +9 Hours)
The center is closed on Saturdays,
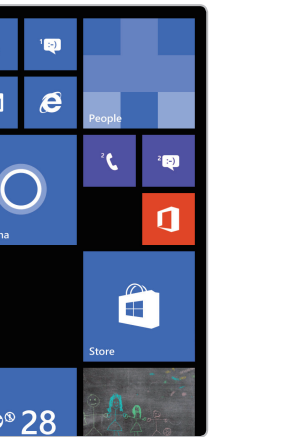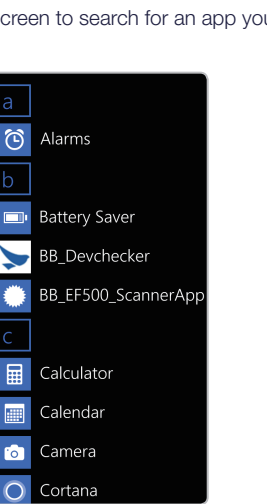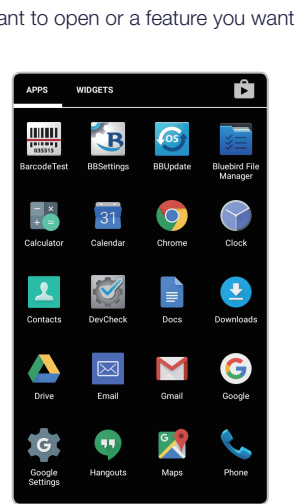Sundays, and Korean national holidays.

Customer Service Center

#103, Gplus Kolon Digital Tower 11F,
Digital-ro 26-gil 123, Guro-gu, Seoul,
Republic of Korea08390)

Bluebird constantly strives to bring utmost satisfaction to all our customers.

Connecting to a Wi-Fi Network

For Windows
On the Start screen, tap **All apps** > **Settings** > **Wi-Fi**.
Turn on a Wi-Fi networking and tap the network you want to join.

For Android
On the Home screen, tap ⚙ > 📶 **Wi-Fi**.
Turn on a Wi-Fi networking and tap the network you want to join.

✅ If necessary, enter the password for the network. If you do not know the password, contact the administrator for the network.

Connecting to a Bluetooth Device

For Windows
On the Start screen, tap **All apps** > **Settings** > **Bluetooth**.
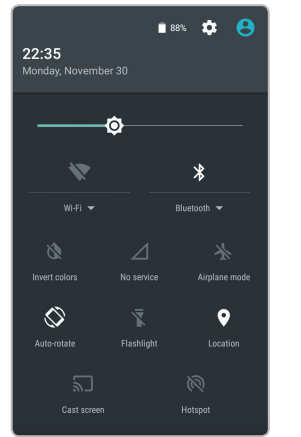Turn on a Bluetooth feature and tap the device name you want to pair.

For Android
On the Home screen tap ⚙ > ⚫ **Bluetooth**.
Turn on a Bluetooth feature and tap the device name you want to pair.

Using Quick Access

Drag down from the top of the screen at any time from any menu or app, and tap a quick action button to turn it on or off.
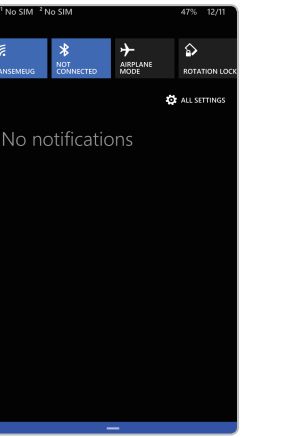
Windows Quick Access Screen

Android Quick Access Screen

Accessories

Cradles	• 1-slot charging cradle: One charging slot for a handset, one charging slot for a spare battery, one micro USB port • 4-slot charging cradle: Four charging slots for handsets, four charging slots for spare batteries, one micro USB port • 1-slot Ethernet cradle: One charging slot for a handset, one charging slot for a spare battery, one micro USB port, Ethernet port • 4-slot Ethernet cradle: Four charging slots for handsets, four charging slots for spare batteries, one micro USB port, Ethernet port

⚠ The power adapter, AC power plug and AC power cable require the use of charging cradles.

Batteries/ Battery Covers	• Standard battery: 2,860 mAh • Extended battery: 5,720 mAh • Standard battery cover • Extended battery cover
Vehicle Accessories	• Vehicle charger • Vehicle mounting cradle
Scanning Accessories	• RFID sled
Carrying Accessories	• Holster
Other Accessories	• Stylus pen • Pistol grip • Protective film • User manual • Adapter plug (220 V) • Quick guide • Power adapter for direct charging

More Information

Warranty Information

Bluebird Inc. (hereinafter referred to as Bluebird) provides the warranty service for its products in compliance with the Bluebird's warranty program.

Upon receiving a notification on a defect of its product within the range of warranty during the warranty period, Bluebird will repair or replace the defective product according to its warranty policy.

If the defective product within the range of warranty is not repairable or replaceable, Bluebird shall refund the purchasing price within a designated period from the date of receiving a notice of defect.

Bluebird assumes no responsibility for repairing, replacement or refund until it receives the defective product from the customer. The replacement shall be equivalent to a new product in the aspect of performance.

This warranty is applied to software products only when the programming commands are not executed. Bluebird does not guarantee interruption-free or error-free performance.

For more warranty information, see the User Manual.

User Manual

For more details on your device, you can download User Manual from www.bluebirdcorp.com. The paper version may be available for some regions.

ENTERPRISE FULLTOUCH HANDHELD COMPUTER

EF400

QUICK GUIDE

🐦 BLUEBIRD